


It displays the faulty tower; it can also be a satellite map.

## System Description

The fault location system TFS 2100E is made of:

- The travelling wave data acquisition unit TDU 100E
- The travelling wave analysis software TAS 2100E

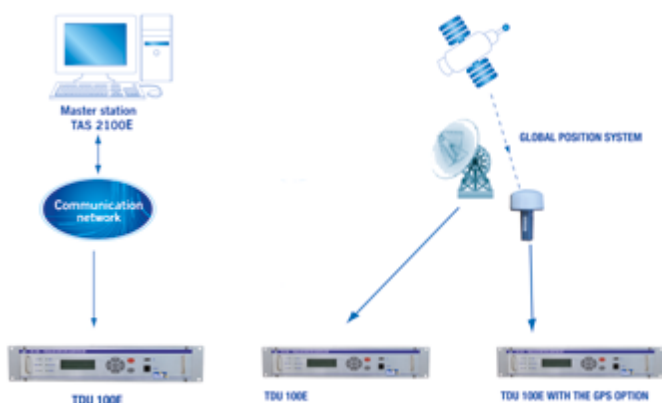

System Configuration

For the accurate timing of the devices involved, TDU 100E needs the time reference input, generated from the GPS Global Positioning System, to provide an accurate time reference. The time reference can come from the built-in GPS synchronizer, or from the substation, as an IRIG-B interface or as a connection to the GPS system.

## Communication

Three communication means are available:

- TCP-IP, via standard ETHERNET connections
- Point-to-point, via an RS-232 port (RS232 / USB converter included)
- Dial-up, via an integrated MODEM and the telephone network

## Data Acquisition Unit TDU 100E

TDU 100E is the travelling wave data acquisition unit designed to acquire the fault travelling waves and to transfer the data to the Master Station for fault location. It continuously samples the secondary outputs of CT's or VT's and stores the sampled data in a circular memory buffer. When the unit is triggered, the embedded super high speed Data Acquisition Unit records and saves in real time the transient travelling wave signals.

The acquired data are then sent to the Master Station via the communication network for further processing.

The configuration of TDU 100E can be viewed and changed by the TAS 2100E software. The software can also be used to export travelling wave records stored in TDU 100E and to display the waveforms, as well as to upgrade the TDU 100E firmware.



TDU 100E Front and Rear Panels

The front panel hosts the following components:

- Six status lights (seven lights optional)
- The LCD display
- Five push-buttons, to scroll the menu
- A Function button to select a menu item and an ESC button to exit the current menu
- Interface connectors: RJ45, for the local connections, and a USB memory connector

The rear panel gives access to a number of slots, where can be accommodated the modules which make TDU 100E. The choice has to be done at order. You can accommodate, left to right:

- One power supply module: three types available. The power supply module has 2 dry contacts for: ALARM and TRIG TDU. Alternatively, as option, a digital output module with 4 dry contacts is available for: TDU synchronized (GPS ok), TRIG TDU, TDU error (SD card problem), spare.
- One communication module: two types available
- One TIME SYNC module: five types available. With the internal GPS module, a surge arrester and an antenna are supplied. (Standard antenna cable length: 30m. Optional: 40m, 50m, 60m, 100m)
- One or two digital inputs modules (5 or 8 inputs each)
- Analog modules: three types available, AD, AI, AV. TDU-100E hosts 8 AI modules maximum for 24 analog channels, or 4 AD/AV modules maximum for 12 analog channels, or a combination of them. With the analog module AI, the signal by the field is got by a non-intrusive installation using clip-on CT's (Standard cable length: 5m. Optional cable length: 7m, 10m; 20m)

On the display it is possible to read the list of recordings and events, and to program the main line parameters, the ETHERNET addresses, and the time zone.

TDU 100E continuously performs the self-control of the equipment. The following alarm information are displayed: GPS signal lost; TDU 100E triggered; communication link broken; triggered.

## TDU 100E Technical Data

- Dimensions: 2U, 19" rack (483mm×323mm×83mm)
- Weight: <4kg without modules: < 6 kg with modules
- Power supply:
  - Basic module: 85 to 264V, 50/60 Hz AC or 90 to 260V DC
  - Option 1: 35 to 140 V DC
  - Option 2: 100 to 300 V DC
- Temperature: operating: -10°C to 55°C; storage: -40°C to 85°C
- Relative Humidity: 0 to 90% without condensation

## Master Station Software TAS 2100E

The Travelling wave analysis software TAS-2100E runs in a PC (the Master Unit) with the WINDOWS(R) operating system. TAS 2100E collects the transient data acquired by the TDU 100E travelling wave data acquisition units installed at all substations and automatically calculates the distance to fault.

Main software features are the followings:

- TFS performs automatic calculation of the distance to fault using double-end and wide area fault location methods, with an error less than  $\pm 50$ m. It also provides tools to allow the operator to analyze travelling wave time tags and waveforms
- The fault location result is the distance from the substation, in km, or in us, or the tower of the line
- The wide area fault location identifies the fault point using the time tags of multiple substation across the power network
- TAS 2100E can discriminate the nature of the recorded travelling wave disturbance, by examining the magnitude of power frequency currents and the CB open/closed logic input.
- The three possible causes of the travelling wave: actual fault, lightning or CB operation are displayed in the fault summary
- TAS 2100E automatically collects the remote substation fault data, and stores them in the local Data Base, as soon as a fault is detected. The local Data Base is based on the standard SQL format

- TAS 2100E performs fault records management, report preview and printing
- The system performs the simulation of a fault
- The system has comprehensive self-diagnosis ability.
- TAS 2100E can remotely upload, view, change the configuration of TDU 100E, and reset the device. SOFTWARE & FIRMWARE are licence free, including their upgrade
- TAS 2100E can publish data to other systems using the table file of database, which provides all the fault informations, using DNP 3.0 protocol or optional IEC 61850. Data can be also seen by the TAS - web

## Ordering Information

CODE	MODULE
40171	TFS2100E - 1 LINE DIRECT with software
41171	TFS2100E - 1 LINE INDIRECT with software
42171	TFS2100E - 2 LINES DIRECT with software
43171	TFS2100E - 2 LINES INDIRECT with software
44171	TFS2100E - 3 LINES DIRECT with software
45171	TFS2100E - 3 LINES INDIRECT with software
46171	TFS2100E - 4 LINES DIRECT with software
47171	TFS2100E - 4 LINES INDIRECT with software
90171	CT MOUNTING PLATE
91171	ADDITIONAL ANALOG INPUT TYPE AI
92171	ADDITIONAL ANALOG INPUT TYPE AV
93171	ADDITIONAL ANALOG INPUT TYPE A-DIRECT
96171	OPTIONAL POWER SUPPLY 35 V to 140 V
97161	OPTIONAL POWER SUPPLY 100 V to 300 V
32171	TSG-10 impulse generator

**ALTANOVA**  
GROUP  
[www.altanova-group.com](http://www.altanova-group.com)

**TECHIMP**

TECHIMP - ALTANOVA GROUP

Via Toscana 11,  
40069 Zola Predosa (Bo) - ITALY  
T +39 051 199 86 050

Email [sales@altanova-group.com](mailto:sales@altanova-group.com)

**isa**

ISA - ALTANOVA GROUP

Via Prati Bassi 22,  
21020 Taino (Va) - ITALY  
T +39 0331 95 60 81

Email [sales@altanova-group.com](mailto:sales@altanova-group.com)